



- 1—ON/OFF Button
- 2—Signal LED
- 3—Room TEMP. Sensor
- 4—AM/PM Time Display
- 5—Unit Number
- 6—Mode:Auto, Cool, Dehumidification, Ventilation and Heat
- 7—Setting Time
- 8—Timer ON/OFF
- 9—Error Mark, 01_ Room TEMP. sensor is wrong; 02_ Pump is wrong; 04_Pipe TEMP. sensor is wrong.
- 10—Error Alarm
- 11—Room TEMP.
- 12—Setting TEMP.
- 13—Fan Speed: Auto, Low, Medium and High
- 14—Sleep Mode
- 15—Swing Display
- 16—Communication Icon
- 17—Wall pad is working Icon
- 18—Mode Select Button
- 19—Fan Speed Select Button
- 20—Sleep Mode, It will automatically adjust TEMP. and save energy when you are sleeping in cool mode or heat mode. If the wall pad is the master, press it for 3s, communication icon appear, you can set parameters and select one slave unit from 1 to 31 by press Time up or down button, all parameters have been sent to one you selected or all slave units you selected none after press Enter Button.
- 21—Timer ON/OFF Button, When the unit is on/off, press the button to set timer off/on, Press Time up or down button to set timer off/on time
- 22—Clock Button, Press it first then press Time up or down button to set time
- 23—Enter Button, In order to avoid misoperation, all setting(except ON/OFF Button) is valid after press it
- 24—Time up/down, Press Timer ON/OFF Button or Clock Button first, then press it to set timer time or clock time
- 25—Swing Button,
- 26—TEMP. Up/Down Button, Press Up Button to increase TEMP. 1°C step (MAX:30°C) Press Down Button to decrease TEMP. 1°C step (MIN:16°C)

FOR SETTING MASTER-SLAVE USING WALL PAD

1. Open the wall pad's plastic box.
2. You will find the figure shown below of the PCB.
NO.00 is the master unit, NO.1-31 are slave units.
The wires of 0,1,2,3,4,5 for slave units settings are shown in the following table:

UNIT NO.	5	4	3	2	1	0	UNIT NO.	5	4	3	2	1	0	UNIT NO.	5	4	3	2	1	0	UNIT NO.	5	4	3	2	1	0
00	○	○	○	○	○	○	09	○	○	○	○	○	○	18	○	○	○	○	○	○	27	○	○	○	○	○	○
01	○	○	○	○	○	○	10	○	○	○	○	○	○	19	○	○	○	○	○	○	28	○	○	○	○	○	○
02	○	○	○	○	○	○	11	○	○	○	○	○	○	20	○	○	○	○	○	○	29	○	○	○	○	○	○
03	○	○	○	○	○	○	12	○	○	○	○	○	○	21	○	○	○	○	○	○	30	○	○	○	○	○	○
04	○	○	○	○	○	○	13	○	○	○	○	○	○	22	○	○	○	○	○	○	31	○	○	○	○	○	○
05	○	○	○	○	○	○	14	○	○	○	○	○	○	23	○	○	○	○	○	○							
06	○	○	○	○	○	○	15	○	○	○	○	○	○	24	○	○	○	○	○	○							
07	○	○	○	○	○	○	16	○	○	○	○	○	○	25	○	○	○	○	○	○							
08	○	○	○	○	○	○	17	○	○	○	○	○	○	26	○	○	○	○	○	○							