


7. Operating Instructions

■ Name and Function of Remote Controller

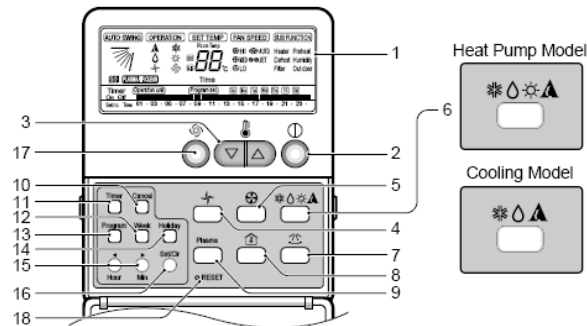

1. Operation display

Displays the operation conditions.

2. On/Off Button

Operation starts when this button is pressed, and stops when the button is pressed again.

3. Set Temperature Button

Used to set the temperature when the desired temperature is obtained.

4. FAN Operation Button

Used to circulate room air without cooling or heating.

5. Fan Speed (Jet Cool Button: 4 way)

Used to set the desired fan speed or select Jet cool mode.

6. Operation Mode Selection Button

Used to select the operation mode.

- Auto Operation Mode
- Cooling Operation Mode
- Soft Dry Operation Mode
- Heating Operation Mode(except cooling model)

7. Auto Swing Button

Used to swing up and down.

8. Room Temperature Checking Button

Used to check the room temperature.

9. Plasma Air Clean Button (optional)

10. Timer Cancel Button

Used to cancel the timer.

11. Timer Set Button

Used to set the timer when the desired time is obtained.

12. Week Button

Used to set a day of the week.

13. Program Button

Used to set the weekly timer.

14. Holiday Button

Used to set a holiday of the week.

15. Time Set Button

Used to set the time of the day and change the time in the weekly timer Function.

16. Set and Clear Button

Used to set and clear the weekly timer.

17. Swirl Button (4 way)

Used to select swirl mode.

Jet Cool Button (1 way)

18. Reset Button

Used to set the current time and clear the setting time.

* Display temperature can be different from actual room temperature if the remote controller is installed at the place where sun-rays are falling directly or the place nearby heat source.

UPUTSTVO ZA DALJINSKI UPRAVLJAČ – ŽIČANI

- 1. Radni displej**
Prikazuje radne uslove
- 2. Prekidač ON/OFF**
Uređaj startuje kada se dugme pritisne, a zaustavlja se kada se ponovo pritisne.
- 3. Dugme podešavanja temperature**
Koristi se za podešavanje željene temperature
- 4. Dugme ventilatora FAN**
Koristi se za uključivanje ventilatora bez grejanja ili hlađenja
- 5. Dugme elektro grejaca**
Ne koristi se.
- 6. Brzina ventilatora**
Koristi se za biranje brzine ventilatora
- 7. Dugme biranja radnog moda**
Koristi se za biranje radnih modova.
 - Auto mod (automatski)
 - Mod hlađenja
 - Mod sušenja
 - Mod grejanja
- 8. Dugme poništavanja tajmera**
Koristi se za poništavanje tajmera.
- 9. Dugme setovanja tajmera**
Koristi se za setovanje tajmera, kada se dobija željeno vreme.
- 10. Nedeljno dugme**
Koristi se za izbor dana u nedelji.
- 11. Programsko dugme**
Koristi se za podešavanje nedeljnog tajmera.
- 12. Dugme za vikend**
Koristi se za podešavanje vikenda u nedelji.

13. Dugme za podešavanje vremena

Koristi se za podešavanje vremena u toku dana i za promenu vremena u funkciji nedeljnog tajmera.

14. Dugme podešavanja i brisanja

Koristi se za podešavanje i brisanje nedeljnog tajmera.

15. Dugme provere sobne temperature

Koristi se za proveru sobne temperature.

16. Dugme plazma čišćenja vazduha (opciono)

17. Dugme reset

Koristi se za podešavanje trenutnog vremena i brisanje setovanog vremena.